


VALVE CORE TOOL



437 001

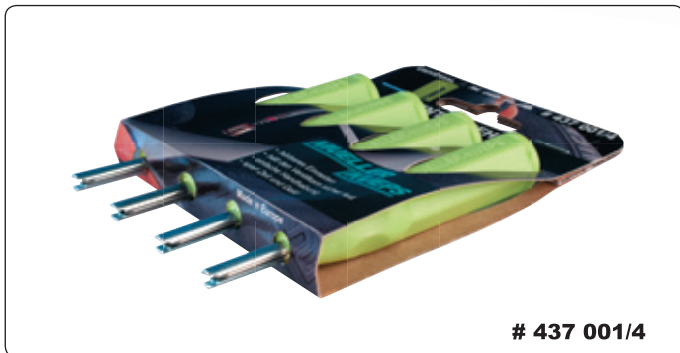

437 001/4

- Insert the Tool into the valve stem.
- Tool will "click" when properly connected to core.
- Upon removing the core, tool will retain the core.
- Easily and quickly replace the core.
- For one handed operation.

437 001 Valve Core Tool
with valve core holder

437 001/4 Valve Core Tool, 4pcs
with valve core holder



437 001/4